

OSNAP Command Line — GstarCAD 2027

3304 kbadmin September 25, 2026 [Command Reference](#) 0 6

OSNAP Command Line

[GstarCAD 2027](#) · [Command Reference](#)

Commands > O Command > OSNAP > OSNAP Command Line

The "-OSNAP" command is used to set running object snap modes.

Command Access:

Command: -OSNAP

Command Description:

Users

can specify one or more object snap modes by inputting the first three characters of mode name. For more than one names, users could separate them by a comma.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3304>