

MAXSORT System Variable — GstarCAD 2027

3318 kbadmin September 25, 2026 [System Variable Reference](#) 0 12

MAXSORT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > M System Variables > MAXSORT

Function Description:

The MAXSORT system variable is used to set the maximum number for items, such as file names, layer names, and block names sorted by number order in dialog box, pull down list, and palettes.

Type	Integer
Saved in	Registry
Initial value	1000
Range	0 ~ 32767

If the total number of items(named objects) exceeds this settings, it will not sort any items.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3318>