

MEASUREINIT System Variable — GstarCAD 2027

MEASUREINIT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > M System Variables > MEASUREINIT

Function Description:

The MEASUREINIT system variable is used to control whether a drawing started from scratch using imperial or metric default settings.

Type	Integer
Saved in	Registry
Initial value	Vary by country /region
Range	0,1

System Variable Value:

- 0: imperial
- 1: metric

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3320>