

MEASUREMENT System Variable — GstarCAD 2027

MEASUREMENT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > M System Variables > MEASUREMENT

Function Description:

The MEASUREMENT system variable is used to control whether the current drawing using imperial or metric hatch pattern and linetype files.

Type	Integer
Saved in	Drawing
Initial value	0(Imperial) or 1(Metric)
Range	0,1

System Variable Value:

- 0: imperial
- 1: metric

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3321>