

MODEMACRO System Variable — GstarCAD 2027

MODEMACRO System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > M System Variables > MODEMACRO

Function Description:

The MODEMACRO system variable is used to display text strings in status bar, such as current drawing name, time/data stamp or special modes.

Type	Strings
Saved in	Not saved
Initial value	""

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)