

MTEXTAUTOSTACK System Variable — GstarCAD 2027

MTEXTAUTOSTACK System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > M System Variables > MTEXTAUTOSTACK

Function Description:

The MTEXTAUTOSTACK system variable is used to control autostacking for the MTEXT command.

Type	Switch
Saved in	Registry
Initial value	1
Range	0/1

System Variable Value:

- 0:**
Autostacking is disabled.
- 1:**
Autostacking is enabled.

Automatically stacks numeric characters entered before and after the caret, forward slash, or pound sign. For example, if you type 1#3 followed by a valid special character or space, the text is automatically stacked as a diagonal fraction.

