

GFCLRSTATE System Variable — GstarCAD 2027

GFCLRSTATE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > G System Variables > GFCLRSTATE

Function Description:

The GFCLRSTATE system variable is used to specify to use single color or double colors for gradient fill.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0:** double colors for gradient fill
- 1:** single color for gradient fill

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3402>