

GRIDDISPLAY System Variable — GstarCAD 2027

GRIDDISPLAY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > G System Variables > GRIDDISPLAY

Function Description:

The GRIDDISPLAY system variable is used to control the display behavior and display limits for grids.

Type	Bitcode
Saved in	Drawing
Initial value	2
Range	0 ~ 15

System Variable Value:

- 0:** limit the grid in the range specified by LIMITS command
 - 1:** do not limit the grid in the rang specified by LIMITS command
 - 2:** turn on the grid adaptive display to limit the density of grid when zoomed out
 - 4:** if specified to be adaptive display, it may regenerate more density grid lines with the same scale as main grid space when zooming in
 - 8:** change the grid plane to follow the XY plane of dynamic UCS
- Note:** specifying the GRIDDISPLAY to be 2, or it may ignore 4.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3406>