

GRIPOBJLIMIT System Variable — GstarCAD 2027

GRIPOBJLIMIT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > G System Variables > GRIPOBJLIMIT

Function Description:

The GRIPOBJLIMIT system variable is used to hide the display of grips when selected more objects in selection than specified quantity.

Type	Integer
Saved in	Registry
Initial value	100
Range	0 ~ 32767

Note: if the GRIPBLOCK system variable has specified to be 1 and selected more objects than specified, the block only displays the insertion point grip, rather than all grips of objects in the block.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)