

GRIPTIPS System Variable — GstarCAD 2027

GRIPTIPS System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > G System Variables > Griptips

Function Description:

The Griptips system variable is used to control the grip tips location when the cursor hovering on the grips supported dynamic blocks or grips of custom objects.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** turn grip tips off
- 1:** turn grip tips on

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3422>