

GTAUTO System Variable — GstarCAD 2027

GTAUTO System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > G System Variables > GTAUTO

Function Description:

The GTAUTO system variable is used to control whether to display 3D gizmos when starting a command before selecting objects in 3D visual style viewport.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** gizmos do not display automatically when selecting objects before starting a command
 - 1:** gizmos display automatically after creating a selection set
- The GTAUTO system variable can affect the display of gizmos of 3D MOVE, 3D ROTATE, and 3D SCALE.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3424>