

HATCHBOUNDSET System Variable — GstarCAD 2027

3536 kbadmin September 25, 2026 [System Variable Reference](#) 0 8

HATCHBOUNDSET System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HATCHBOUNDSET

Function Description:

The HATCHBOUNDSET system variable is used to control the display of the hatch panel and dialog box boundary dropdown after creating a new boundary set. (Read-only)

Type	Integer
Saved in	Not-saved
Initial value	0
Range	0/1

System Variable Value:

- 0:** Use the boundary objects within the current viewport.
- 1:** Use the boundary set.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3536>