

HATCHQUICKPREVIEW System Variable — GstarCAD 2027

3538 kbadmin September 25, 2026 [System Variable Reference](#) 0 15

HATCHQUICKPREVIEW System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HATCHQUICKPREVIEW

Function Description:

The HATCHQUICKPREVIEW system variable is used to control whether or not a preview of the hatch pattern is displayed when the number of hatch entities is high.

Type	Integer
Saved in	Registry
Initial value	1500
Range	Integers between -3000 and 3000

System Variable Value:

- 0<n≤3000:** Launches a hatch quick preview regardless of the number of entities
- 3000≤n≤0:** Launches hatch quick preview when the number of entities is ≤3000, hatch quick preview is not enabled when the number of entities > 3000.

Other versions with matching text

[2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3538>