

HATCHTYPE System Variable — GstarCAD 2027

HATCHTYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HATCHTYPE

Function Description:

The HATCHTYPE system variable is used to switch the hatch pattern type to gradient type, or gradient type to hatch pattern type. (Read-only)

Type	Integer
Saved in	Not-saved
Initial value	0
Range	0/1

System Variable Value:

- 0:** Hatch pattern type.
- 1:** Gradient type.