

HIDEPRECISION System Variable — GstarCAD 2027

HIDEPRECISION System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HIDEPRECISION

Function Description:

The HIDEPRECISION system variable is used to control the precious of hides and shades.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0:** single precious, takes cost less memory
- 1:** double precious, takes more memory

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

