

HIDETEXT System Variable — GstarCAD 2027

3542 kbadmin September 25, 2026 [System Variable Reference](#) 0 12

HIDETEXT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HIDETEXT

Function Description:

The HIDETEXT system variable is used to specify whether to deal with text objects created by TEXT or MTEXT command when executing HIDE command.

Type	Parameter
Saved in	Drawing
Initial value	on

System Variable Value:

- On:** do not hide text and other objects
Off: hide text but display other objects

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3542>

