

HPBOUND System Variable — GstarCAD 2027

HPBOUND System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HPBOUND

Function Description:

The HPBOUND system variable is used to control types of objects created by HATCH and BOUNDARY commands.

Type	Integer
Saved in	Not saved
Initial value	1
Range	0,1

System Variable Value:

0: create regions

1: create polylines

It will create polylines when the HPBOUNDRETAIN system variable is on.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3548>