

HPDLGMODE System Variable — GstarCAD 2027

3552 kbadmin September 25, 2026 [System Variable Reference](#) 0 4

HPDLGMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HPDLGMODE

Function Description:

The HPDLGMODE system variable is used to control the display of the Hatch and Gradient dialog box and the Hatch Edit dialog box.

Type	Integer
Saved in	User-settings
Initial value	2
Range	0,1,2

System Variable Value:

- 0:** does not display the Hatch and Gradient dialog box for HATCH and GRADIENT unless prompts to enter settings
- 1:** display the Hatch and Gradient dialog box
- 2:** if the ribbon is active (RIBBONSTATE=1), does not display the Hatch and Gradient dialog box for HATCH and GRADIENT; if the ribbon is not active (RIBBONSTATE=0), display the Hatch and Gradient dialog box

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3552>