

HPDOUBLE System Variable — GstarCAD 2027

HPDOUBLE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HPDOUBLE

Function Description:

The HPDOUBLE system variable is used to specify double hatch patterns for custom defined patterns.

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

The double hatch pattern specifies a second set of lines drawn at 90 degrees with original line.

System Variable Value:

- 0:** turn off double hatch pattern
- 1:** turn on double hatch pattern

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3553>