

HPLAYER System Variable — GstarCAD 2027

HPLAYER System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HPLAYER

Function Description:

The HPLAYER system variable is used to specify a default layer for new hatches and fills in the current drawing.

Type	String
Saved in	Drawing
Initial value	Use current

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)