

HPMAXLINES System Variable — GstarCAD 2027

3561 kbadmin September 25, 2026 [System Variable Reference](#) 0 18

HPMAXLINES System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HPMAXLINES

Function Description:

The HPMAXLINES system variable is used to set the maximum of hatch lines generated when hatching.

Type	Real
Saved in	Registry
Initial value	100000
Range	100 ~ 100000000

Other versions with matching text

[2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3561>