

HPQUICKPREVIEW System Variable — GstarCAD 2027

HPQUICKPREVIEW System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HPQUICKPREVIEW

Function Description:

The HPQUICKPREVIEW system variable is used to control whether to display hatch preview when specifying hatch regions.

Type	Parameter
Saved in	User-settings
Initial value	1
Range	0,1

System Variable Value:

- 0:** no preview
- 1:** quick preview

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3565>