

HPRELATIVEPS System Variable — GstarCAD 2027

HPRELATIVEPS System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HPRELATIVEPS

Function Description:

The HPRELATIVEPS system variable is used to control whether the scaling of the hatch pattern is associated with the scale factor of the paper space.

Type	Integer
Saved in	Not-saved
Initial value	0
Range	0/1

System Variable Value:

- 0:** The scaling of the hatch pattern is based solely on the original scale of the model space and is not affected by the viewport scale.
- 1:** The scaling of the hatch pattern will reference the scale factor of the layout viewport.