

HYPERLINKBASE System Variable — GstarCAD 2027

3570 kbadmin September 25, 2026 [System Variable Reference](#) 0 11

HYPERLINKBASE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > H System Variables > HYPERLINKBASE

Function Description:

The HYPERLINKBASE system variable is used to specify the path used for all relative hyperlinks in the drawing.

Type	Strings
Saved in	Drawing
Initial value	""

If no value is specified, the drawing path will be used for all relative hyperlinks.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3570>