

TEMPOVERRIDES System Variable — GstarCAD 2027

TEMPOVERRIDES System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > T System Variables > TEMPOVERRIDES

Function Description:

The TEMPOVERRIDES system variable is used to turn temporarily override keys on or off for drawing.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

Users can temporarily open or close a certain drawing supplementary tool set in Drafting settings dialog box by pressing temporarily override keys, such as, ortho mode, object snap or polar mode.

System Variable Value:

- 0: off
- 1: on

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3584>