

TEMPPREFIX System Variable — GstarCAD 2027

TEMPPREFIX System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > T System Variables > TEMPPREFIX

Function Description:

The TEMPPREFIX system variable is used to store the file folder name with path separators for temporary files.
(Read-Only)

Type	Strings
Saved in	Not saved
Initial value	Unknown

The temporary file combined name and path length is limited to 255 characters.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)