

TEXTQLTY System Variable — GstarCAD 2027

TEXTQLTY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > T System Variables > TEXTQLTY

Function Description:

The TEXTQLTY system variable is used to set the resolutions of TureType text when plotting and rendering.

Type	Integer
Saved in	Not saved
Initial value	50
Range	0 ~ 100

A smaller value will decrease text smoothness, but it can increase speed.
A larger value can increase text smoothness, but it can decrease speed.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)