

THICKNESS System Variable — GstarCAD 2027

THICKNESS System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > T System Variables > THICKNESS

Function Description:

The THICKNESS system variable is used to set default 3D thickness property when creating 2D geometric objects.

Type	Real
Saved in	Drawing
Initial value	0.0000

Note: when users want to add 3D thickness to new created objects by RECTANG and TEXT commands, there is one exception, the 3D thickness property will use Property palettes or separate settings by CHPROP command. The single text must be SHX font to accept 3D thickness.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)