

TILEMODE System Variable — GstarCAD 2027

TILEMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > T System Variables > TILEMODE

Function Description:

The TILEMODE system variable is used to control whether it is allowed to access paper space.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

System Variable Value:

- 0:** allow to access paper space and set the recently accessed layout to be current
- 1:** forbid to access paper space and set the model space to be current

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

