

TRACKPATH System Variable — GstarCAD 2027

TRACKPATH System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > T System Variables > TRACKPATH

Function Description:

The TRACKPATH system variable is used to control the display of alignment path for polar track and object snap track.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1,2,3

System Variable Value:

- 0:**display polar track and object snap track path in full screen
- 1:** display polar track path in full screen;only display the object snap track path from alignment point to cursor location starting point
- 2:** display object snap track path; do not display polar track path
- 3:** do not display polar track path; only display the object snap track path from alignment point to cursor location starting point

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3600>