

TRAYNOTIFY System Variable — GstarCAD 2027

TRAYNOTIFY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > T System Variables > TRAYNOTIFY

Function Description:

The TRAYNOTIFY system variable is used to control whether to display service notification in status tray.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** do not display notification
- 1:** display notification

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3602>