

TSPACETYPE System Variable — GstarCAD 2027

TSPACETYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > T System Variables > TSPACETYPE

Function Description:

The TSPACETYPE system variable is used to control the used line space type for Mtext.

Type	Integer
Saved in	Registry
Initial value	1
Range	1,2

Adjust line space by at least the tallest characters in a line.
Use accurate specified line space, regardless single character size.

System Variable Value:

- 1:at least
- 2: accurate

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3608>