

MLEADERALIGN Command — GstarCAD 2027

3633 kbadmin September 25, 2026 [Command Reference](#) 0 10

MLEADERALIGN Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > M Command > MLEADERALIGN

Function Description:

This command is used to align and space selected multileaders. After selecting Multileaders, users should specify a multileader that used to align to selected multileaders.

Command Access:

Menu: Modify > Object > Multileader > Align

Ribbon: Annotation > Leader > MLEADERALIGN

Toolbar: Multileader > Align Multileaders

Command: MLEADERALIGN

Alias: MLA

Command Prompts:

Select Multileader:

Select multileader to align to

or [Options]:

Enter an option [Distribute/make leader segments

Parallel/specify Spacing/Use current spacing] <Use current spacing>:

Distribute

Spaces content evenly between two selected points.

Make leader segments Parallel

Aligns all selected multileaders and makes them parallel to the selected one.

Specify Spacing

Specifies the spacing between the selected multileaders.

Use current spacing

Uses the current spacing between multileader content.

Related References?

- [Commands about Creating Leaders](#)

Related Tasks?

- [To Create a Leader With Lines](#)
- [To Create a Spline Leader With Text or a Block](#)
- [To Create Multiple Leaders From the Same Annotation](#)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3633>