

LASTANGLE System Variable — GstarCAD 2027

3655 kbadmin September 25, 2026 [System Variable Reference](#) 0 13

LASTANGLE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LASTANGLE

Function Description:

The LASTANGLE system variable is used to store the ending tangent angle of last inputted arc, line, or polyline relative to XY plane in current UCS.
(Read-Only)

Type	Real
Saved in	Not saved
Initial value	0.0000

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3655>