

LASTPROMPT System Variable — GstarCAD 2027

3657 kbadmin September 25, 2026 [System Variable Reference](#) 0 25

LASTPROMPT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LASTPROMPT

Function Description:

The LASTPROMPT system variable is used to store the last string to echo to the command prompt.
(Read-Only)

Type	Strings
Saved in	Not saved
Initial value	""

This string is the same as the last line seen at the Command prompt and includes any user input.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3657>