

LAYERNOTIFY System Variable — GstarCAD 2027

LAYERNOTIFY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LAYERNOTIFY

Function Description:

The LAYERNOTIFY system variable is used to specify when a warning displays when unreconciled new layers are found.

Type	Bitcode
Saved in	Drawing
Initial value	0
Range	-63 ~ 63

System Variable Value:

- 0:off
- 1: plot
- 2: on
- 4: load/reload/attach xrefs
- 8: restore layer state
- 16: save
- 32: insert

Note: if specified the LAYEREVALCTL system variable to be 0, the settings of LAYEREVAL and LAYERNOTIFY will be ignored.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3664>