

LEGACYCTRLPICK System Variable — GstarCAD 2027

LEGACYCTRLPICK System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LEGACYCTRLPICK

Function Description:

The LEGACYCTRLPICK system variable is used to specify the Ctrl key behavior for selection cycling and subobject selection.

Type	Integer
Saved in	Registry
Initial value	2
Range	0,1,2

System Variable Value:

- 0:** select subobjects(faces, edges, and edges) of 3D solid, surfaces, and meshes by pressing Ctrl + click
- 1:** select subobjects(faces, edges, and edges) of 3D solid, surfaces, and meshes by pressing Ctrl + click
- 2:** when SUBOBJSELECTIONMODE specified to 0, it is available to select subobjects (faces, edges, and edges) of 3D solid, surfaces, and meshes by pressing Ctrl + click.
when SUBOBJSELECTIONMODE specified to 1,2,3,4, or 5, it is no necessary to select subobjects by pressing Ctrl key.
when SUBOBJSELECTIONMODE specified to 1,2,3,4, or 5, and pressing Ctrl key, subobject filters are in off state until releasing Ctrl key.

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3667>