

LENSLENGTH System Variable — GstarCAD 2027

LENSLENGTH System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LENSLENGTH

Function Description:

The LENSLENGTH system variable is used to store the length of the lens in millimeters used in perspective viewing.

Type	Real
Saved in	Drawing
Initial value	50.000

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)