

LIGHTGLYPHDISPLAY System Variable — GstarCAD 2027

3669 kbadmin September 25, 2026 [System Variable Reference](#) 0 11

LIGHTGLYPHDISPLAY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LIGHTGLYPHDISPLAY

Function Description:

The LIGHTGLYPHDISPLAY system variable is used to control the display of light glyphs.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

The light glyphs is symbols for point light and spotlight.

System Variable Value:

0:off
1:on

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3669>