

# LIMCHECK System Variable — GstarCAD 2027

## LIMCHECK System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LIMCHECK

### Function Description:

The LIMCHECK system variable is used to control whether it is allowed to create objects beyond grid limits.

|               |         |
|---------------|---------|
| Type          | Integer |
| Saved in      | Drawing |
| Initial value | 0       |
| Range         | 0,1     |

When this system variable is off, the light in block has no effect on 3D objects rendering in current viewport.

### System Variable Value:

- 0:** it is allowed to create objects beyond grid limits
- 1:** it is not allowed to create objects beyond grid limits

### Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3673>