

LIMMAX System Variable — GstarCAD 2027

LIMMAX System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LIMMAX

Function Description:

The LIMMAX system variable is used to store the right-top corner grid limit in current space by world UCS.

Type	2D points
Saved in	Drawing
Initial value	12.0000,9.0000(Imperial) or 420.0000,297.0000(Metric)

The LIMMAX is read only when paper space is active and the paper background or printable area is displayed.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)