

LIMMIN System Variable — GstarCAD 2027

LIMMIN System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LIMMIN

Function Description:

The LIMMIN system variable is used to store the left-bottom corner grid limit in current space by world UCS.

Type	2D points
Saved in	Drawing
Initial value	0.0000,0.0000

The LIMMIN is read only when paper space is active and the paper background or printable area is displayed.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)