

LISPINIT System Variable — GstarCAD 2027

LISPINIT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LISPINIT

Function Description:

The LISPINIT system variable is used to specify whether retaining LISP function and variable when opening a new drawing in single file interface.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** save LISP function and variables into every drawing.
- 1:**LISP function and variable are valid in current drawing task only.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3677>