

LOFTMAG2 System Variable — GstarCAD 2027

LOFTMAG2 System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LOFTMAG2

Function Description:

The LOFTMAG2 system variable is used to set the amplitude of draft angle through the last cross section in the loft operation.

Type	Real
Saved in	Drawing
Initial value	0.0000

This system variable can control how fast the surface starts bending toward the next cross section.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)