

LOGINNAME System Variable — GstarCAD 2027

3691 kbadmin September 25, 2026 [System Variable Reference](#) 0 3

LOGINNAME System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LOGINNAME

Function Description:

The LOGINNAME system variable is used to display current login users 'name, and store it together with DWG file and relation documentation properties statistic information.
(Read-Only)

Type	Strings
Saved in	Not saved
Initial value	Unknown

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3691>