

LUPREC System Variable — GstarCAD 2027

LUPREC System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LUPREC

Function Description:

The LUPREC system variable is used to set display precious for linear units and coordinates.

Type	Integer
Saved in	Drawing
Initial value	4
Range	0 ~ 8

No matter how to set the display precious, the value for distance, area, and volume and linear coordinate internal precious are always maintained. The LUPREC does not have effect on dimension text. The dimension text is controlled by DIMDEC system variable and saved together with dimension styles.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)