

LWDEFAULT — GstarCAD 2027

LWDEFAULT

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LWDEFAULT

Function Description:

The LWDEFAULT system variable is used to set the value for default lineweight.

Type	Enum
Saved in	Registry
Initial value	25

The default lineweight can be set to any valid lineweight value in hundredths of millimeters, including: 0, 5, 9, 13, 15, 18, 20, 25, 30, 35, 40, 50, 53, 60, 70, 80, 90, 100, 106, 120, 140, 158, 200, and 211. All values must be entered in hundredths of millimeters. (Multiply a value by 2540 to convert values from inches to hundredths of millimeters)

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)