

LWEIGHTDRAWCTRL System Variable — GstarCAD 2027

LWEIGHTDRAWCTRL System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > L System Variables > LWEIGHTDRAWCTRL

Function Description:

The LWEIGHTDRAWCTRL system variable is used to control whether or not the self-drawing algorithm is enabled.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

0: turn off
1: turn
on

Other versions with matching text

[2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3698>