

LIMITS Command — GstarCAD 2027

3786 kbadmin September 25, 2026 [Command Reference](#) 0 3

LIMITS Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > L Command > LIMITS

Function Description:

This command is used to set the boundaries of the grid and control its display in the current model or named layout.

Command Access:

Icon: /

Menu: Format > Drawing Limits

Ribbon: /

Toolbar: /

Command: LIMITS

Alias: /

Command Prompts:

Specify lower left corner or [ON/OFF]:
Specify upper right corner:
Regenerating model.

Lower Left Corner

Specifies the lower left corner of the grid limits.

Upper right corner

Specifies a point in the drawing area that represents the opposite corner of the rectangular limits boundary.

On

Turns on the limits checking.

In the ON mode, users can not enter a point outside of the limits. For points inside of the grid can be checked.

OFF

Turns off the limits checking and keeps the current values to be checked next time.

Related References?

- [Commands about Grid and Grid Snap](#)

Related Concepts?

- [About Adjusting the Grid and Snap Space](#)

Related Tasks?

- [To Display a Grid and Set the Grid Spacing](#)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3786>