

LTSCALE Command — GstarCAD 2027

3797 kbadmin September 25, 2026 [Command Reference](#) 0 9

LTSCALE Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > L Command > LTSCALE

Function Description:

This command is used to set the linetype scale of the whole drawing. Changes of the linetype scale leads to the drawing regeneration. They are applied on all objects in a drawing.

Command Access:

Icon: /
Menu: /
Ribbon: /
Toolbar: /
Command: LTSCALE
Alias: LTS

Command Prompts:

Enter new linetype scale factor: <1.0000>:

Related References?

- [Commands about Model Space and Paper Space](#)
- [Commands about Linetypes](#)

Related Tasks?

- [To Work with Linetypes](#)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=3797>